


INSTRUCTIONS D’ASSEMBLAGE Lebert PARALLETES


Modèle # LFI-PARA

LISTE DE PIÈCES


A: Barres en U x 2 pcs

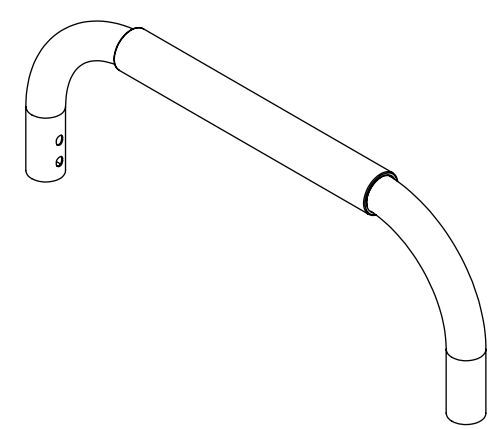

B: Pieds x 4 pcs

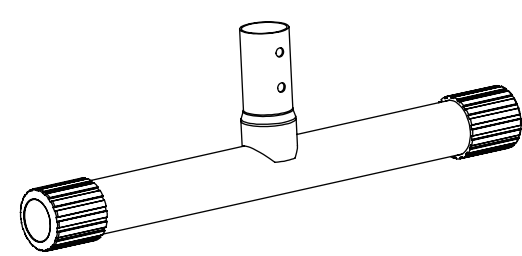


C: Boulons x 8 pcs

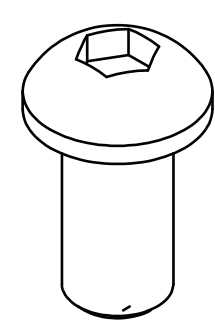

D: Contre-écrous x 8 pcs




E: Clé Allen x 1 pc

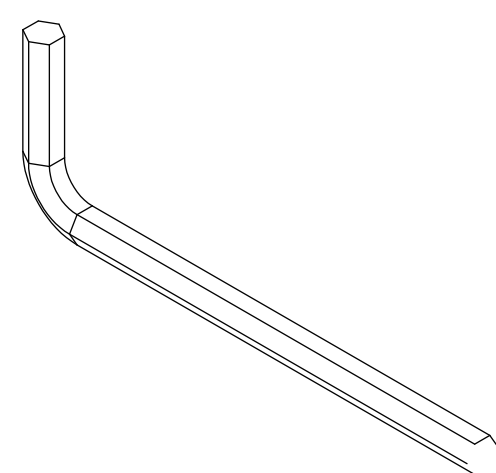


ÉTAPE 1.

Retirer les attaches en plastique et le papier bulle en toute sécurité.
Retirer les boulons et les contre-écrous du sac en plastique.

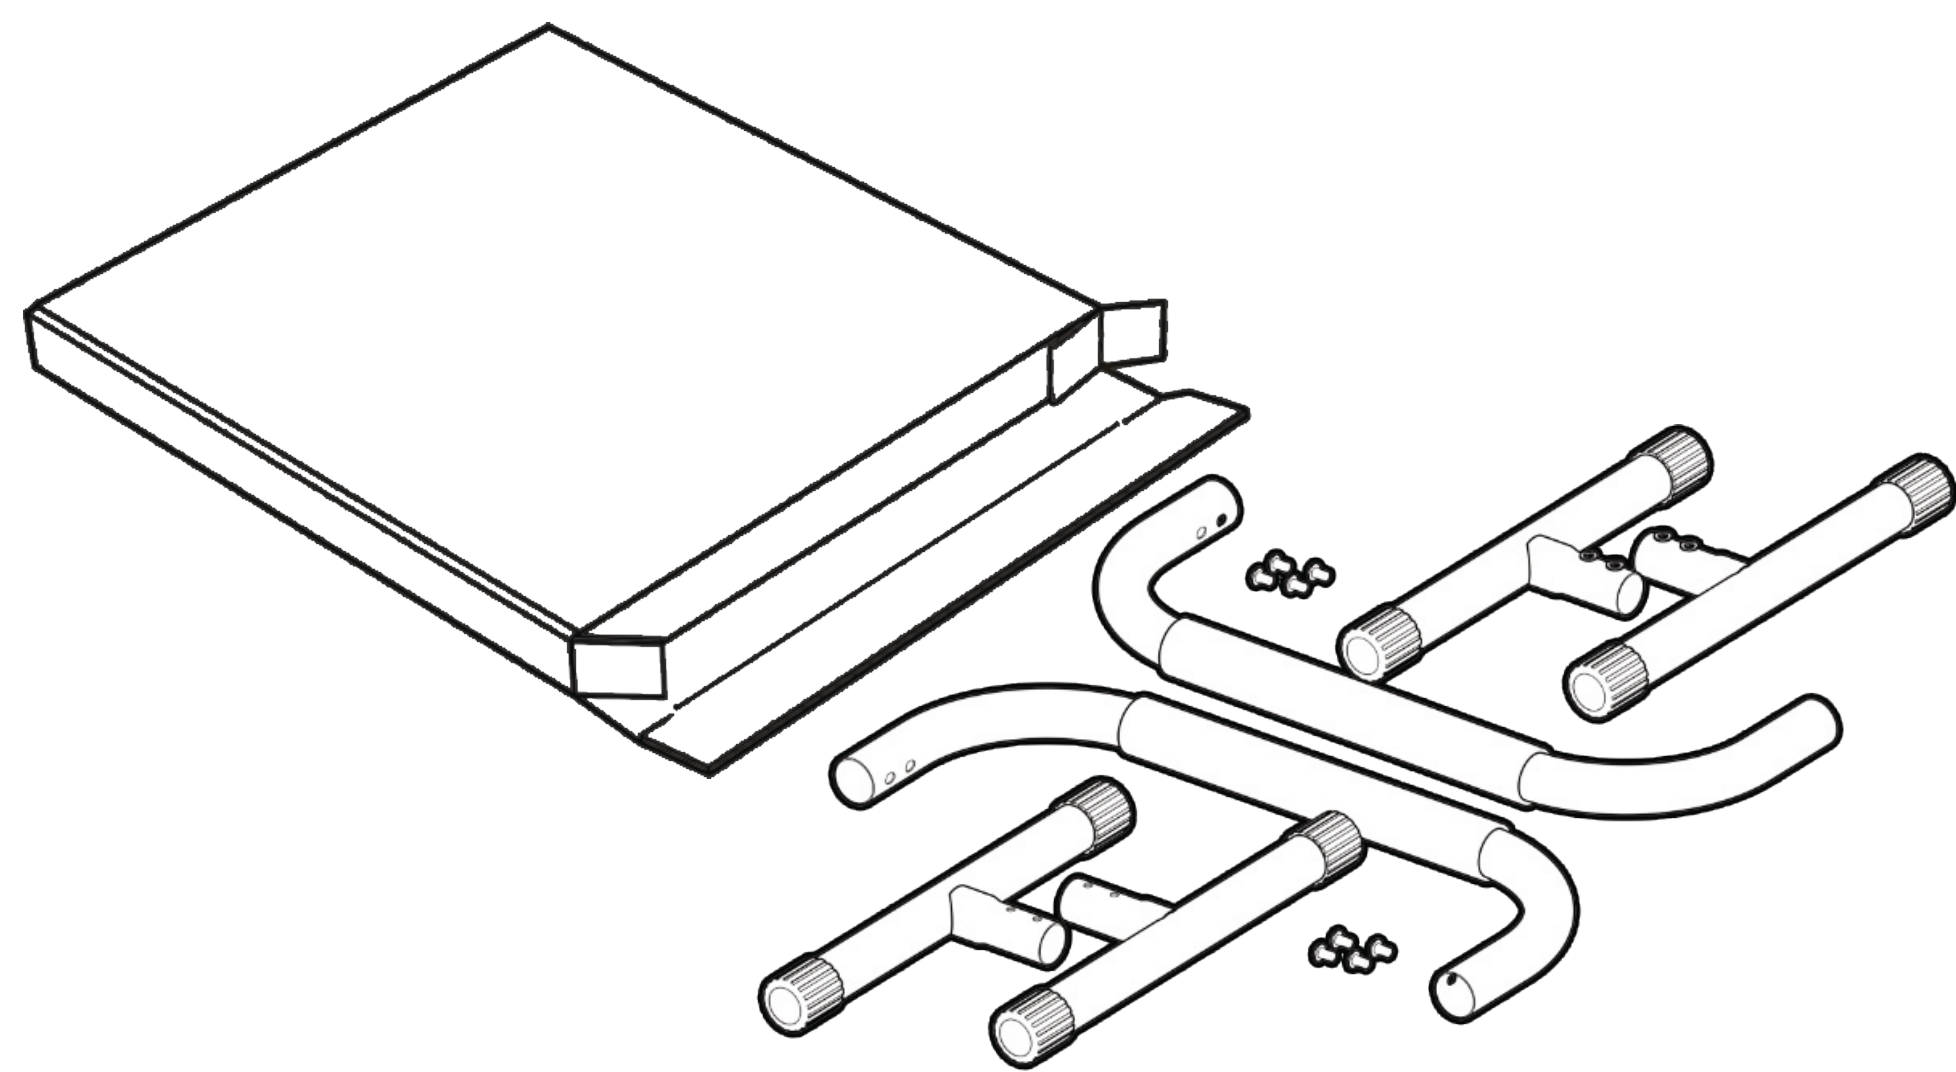


ÉTAPE 2.

Glisser les pieds (B) dans les ouvertures de la barre en U (A). Tenir le Lebert PARALLETTE en position verticale. Aligner les trous des pieds (B) avec les trous de la barre en U. Placer le contre-écrou (D) sur le boulon (C). Insérer le boulon (C) dans le trou de la barre en U (A), serrer à la main chaque boulon (C) avec le contre-écrou (D) jusqu'à ce qu'il soit bien ajusté dans le trou.

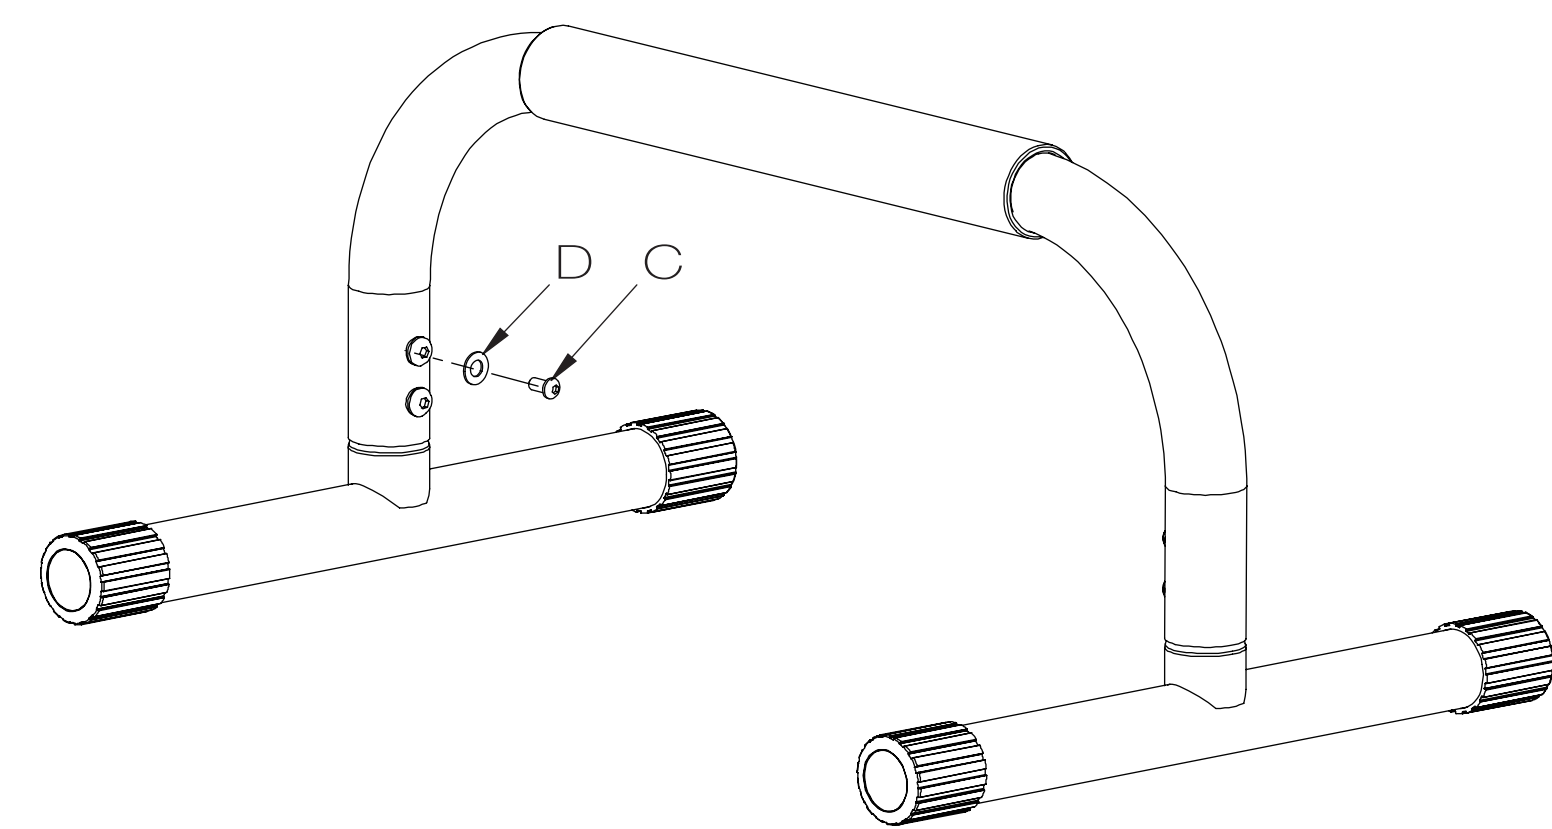


ÉTAPE 3.

Placer le Lebert PARALLETTE sur une surface plane. S'assurer que les deux pieds (B) sont en position verticale et parallèle. Serrer les boulons inférieurs (C) avec la clé Allen (E). Serrer ensuite les boulons supérieurs (C) avec la clé Allen (E). Si un ajustement est nécessaire, desserrer les boulons et tourner les pieds (B) puis resserrer dans l'ordre indiqué ci-dessus.

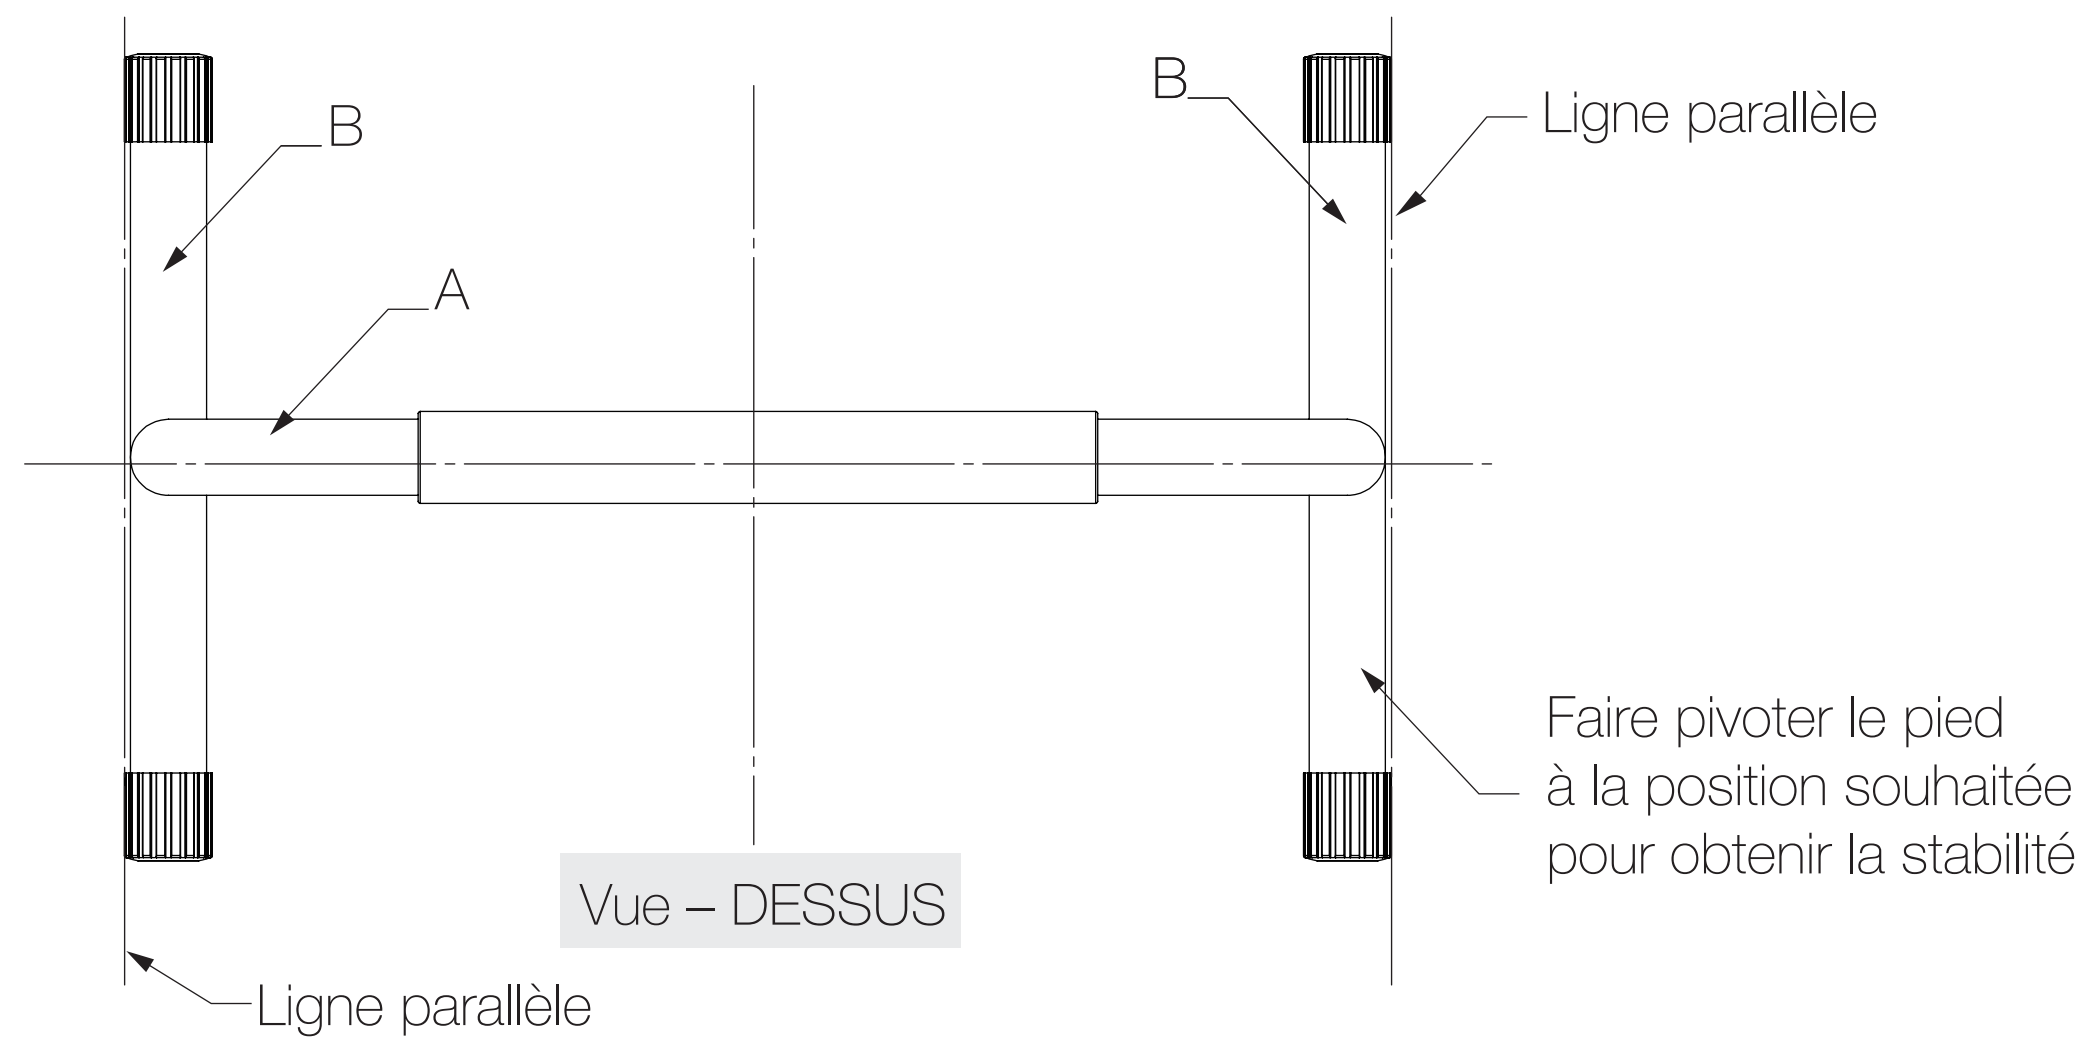

ÉTAPE 4.

Suivre les mêmes étapes pour assembler l'autre PARALLETTE.

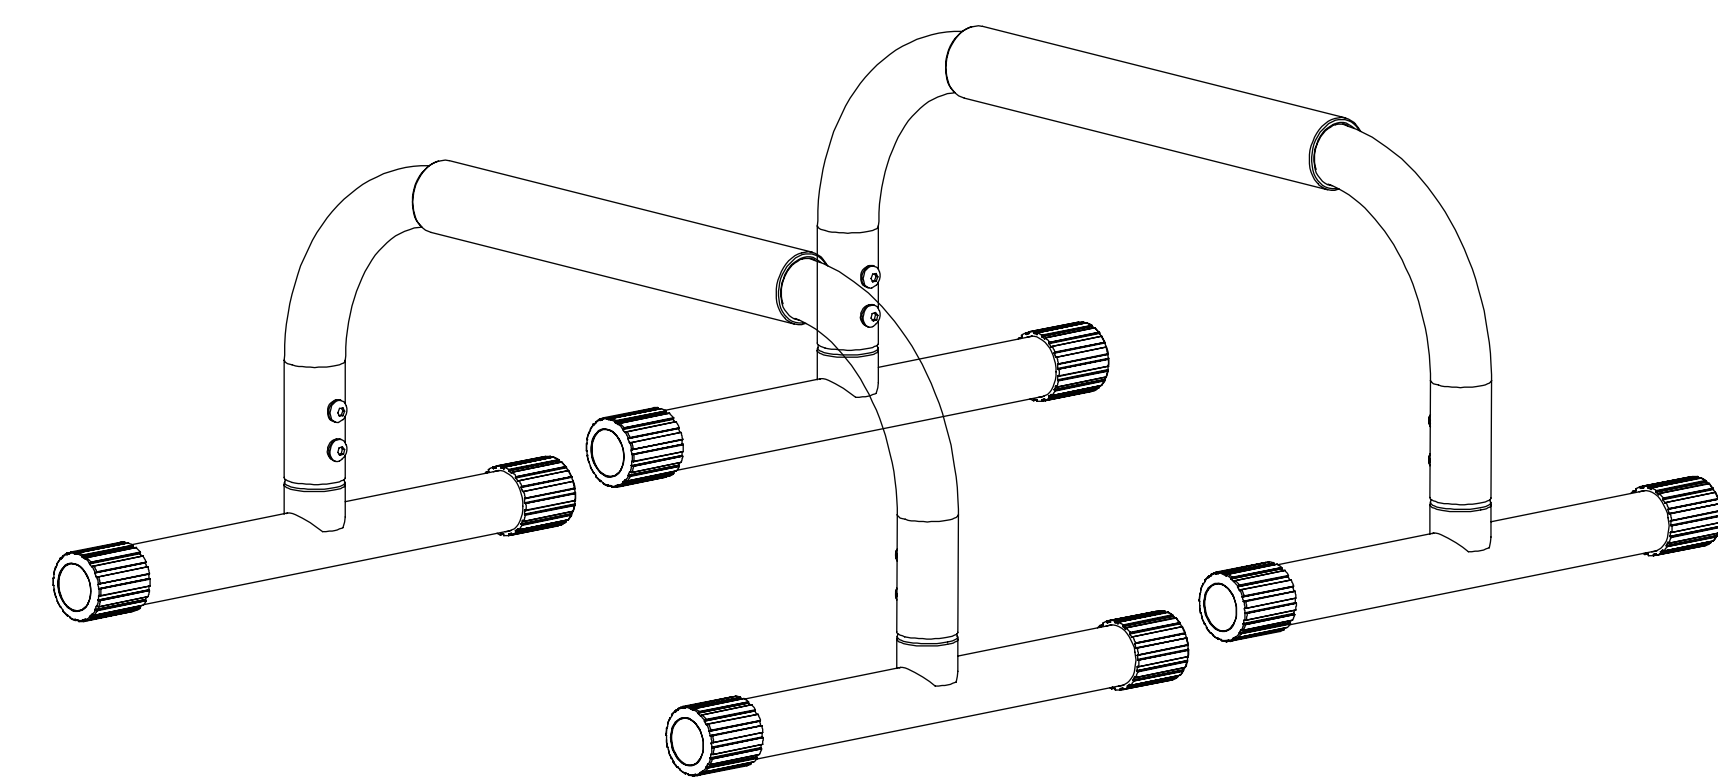


1 ensemble (2 pcs)

Lebert PARALLETES ASSEMBLY INSTRUCTIONS


Model# LFI-PARA

PART LIST


A: U-bar x 2pcs

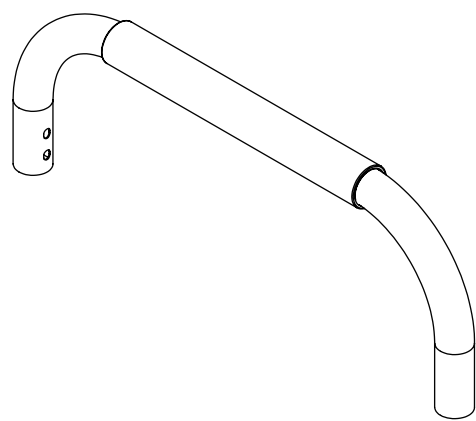

B: Feet x 4pcs

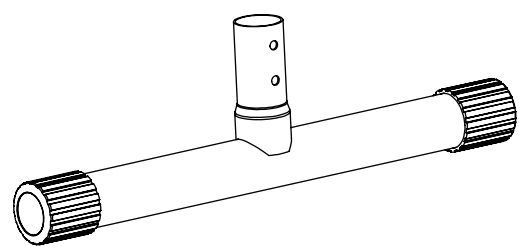


C: Bolt x 8pcs

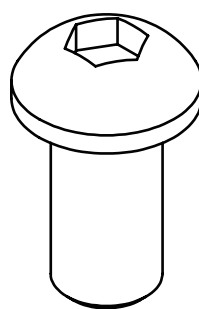

D: Lock Washer x 8pcs




E: Allen Key x 1pc

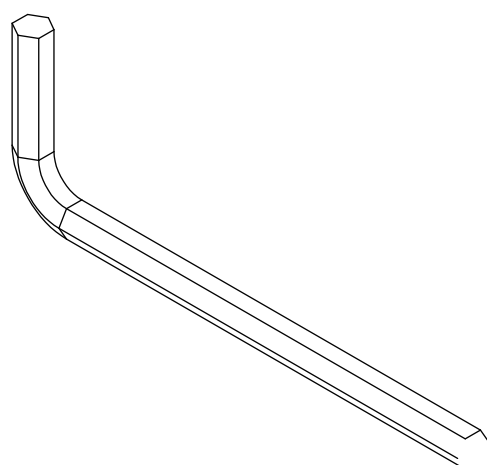


STEP 1.

Safely remove plastic ties and bubble wrap.
Remove the bolts and lock washers from the plastic bag.

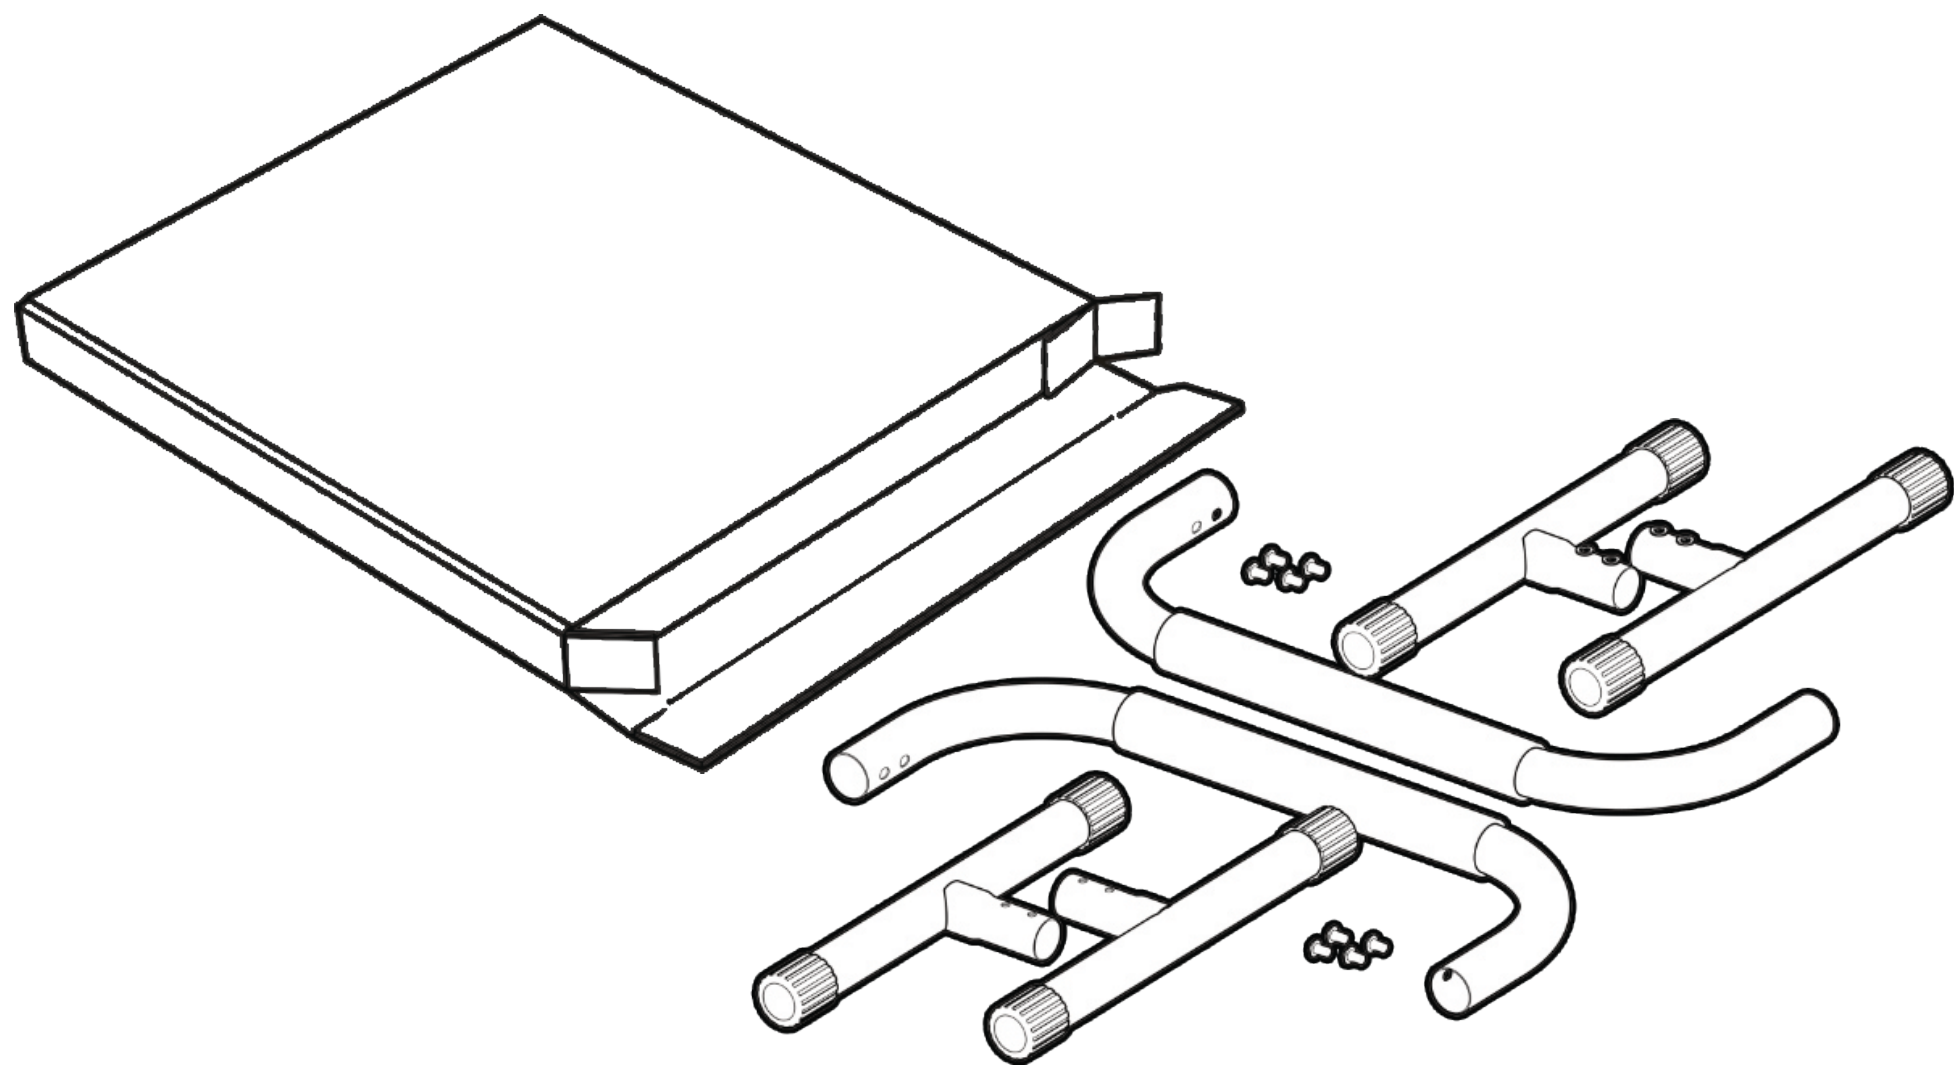


STEP 2.

Slide the feet (B) into the openings of the U-bar (A). Stand the Lebert PARALLETTE upright. Line up the holes in the feet (B) with the holes in the U-bar. Place the lock washer (D) onto the bolt (C). Insert the bolt (C) into the hole on the U-bar (A), Hand-tighten each bolt (C) with lock washer (D) until snug into the hole.

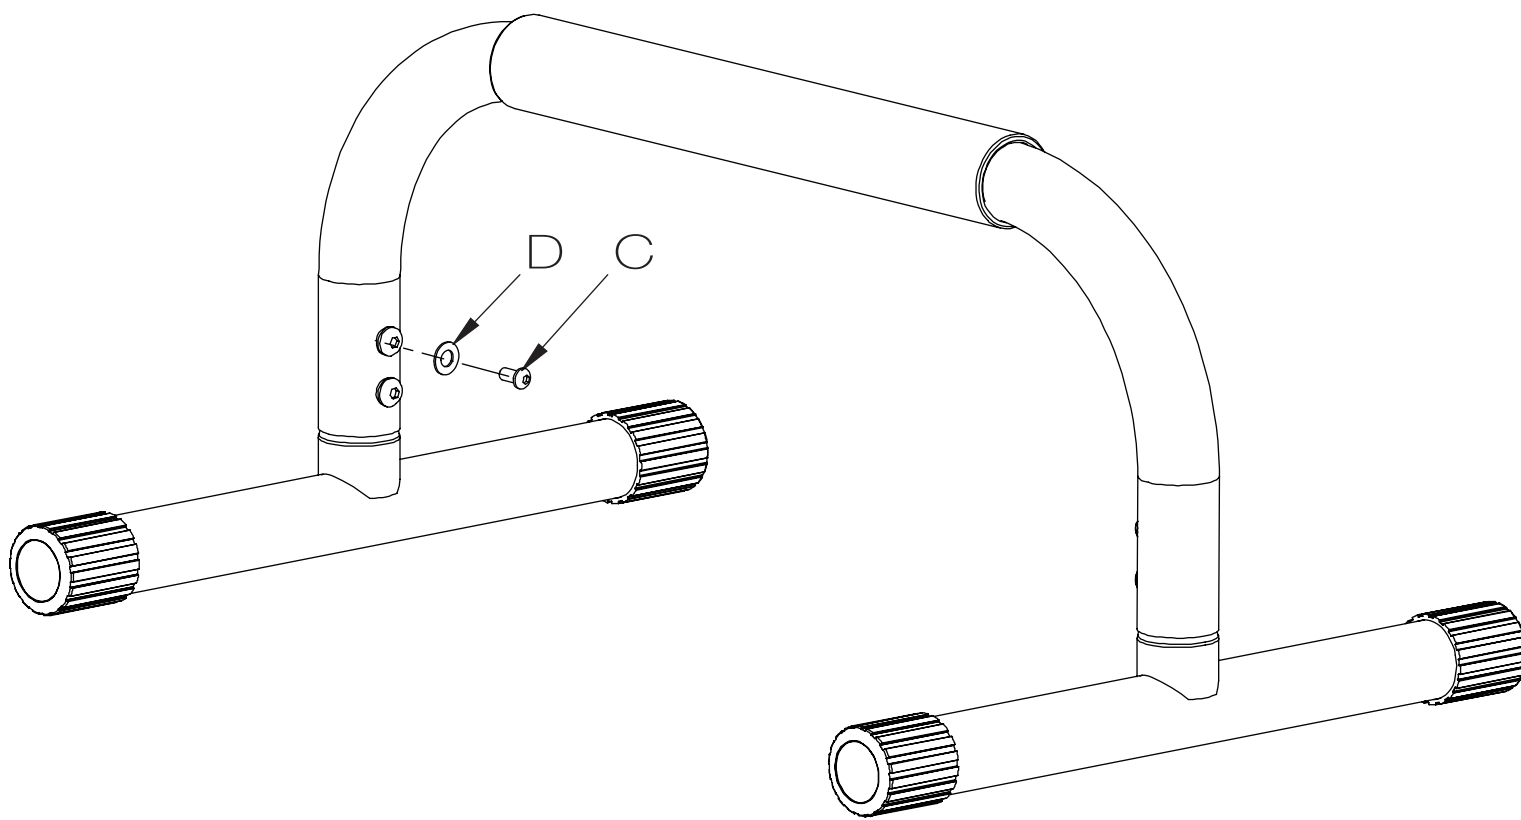


STEP 3.

Stand the Lebert PARALLETTE on an even surface. Ensure that the two feet (B) are in a vertical and parallel position. Tighten the lower bolts (C) with the Allen key (E). Then tighten the higher bolts (C) with the Allen key (E). If an adjustment is required, loosen the bolts and rotate the feet (B) then retighten in the order indicated above.

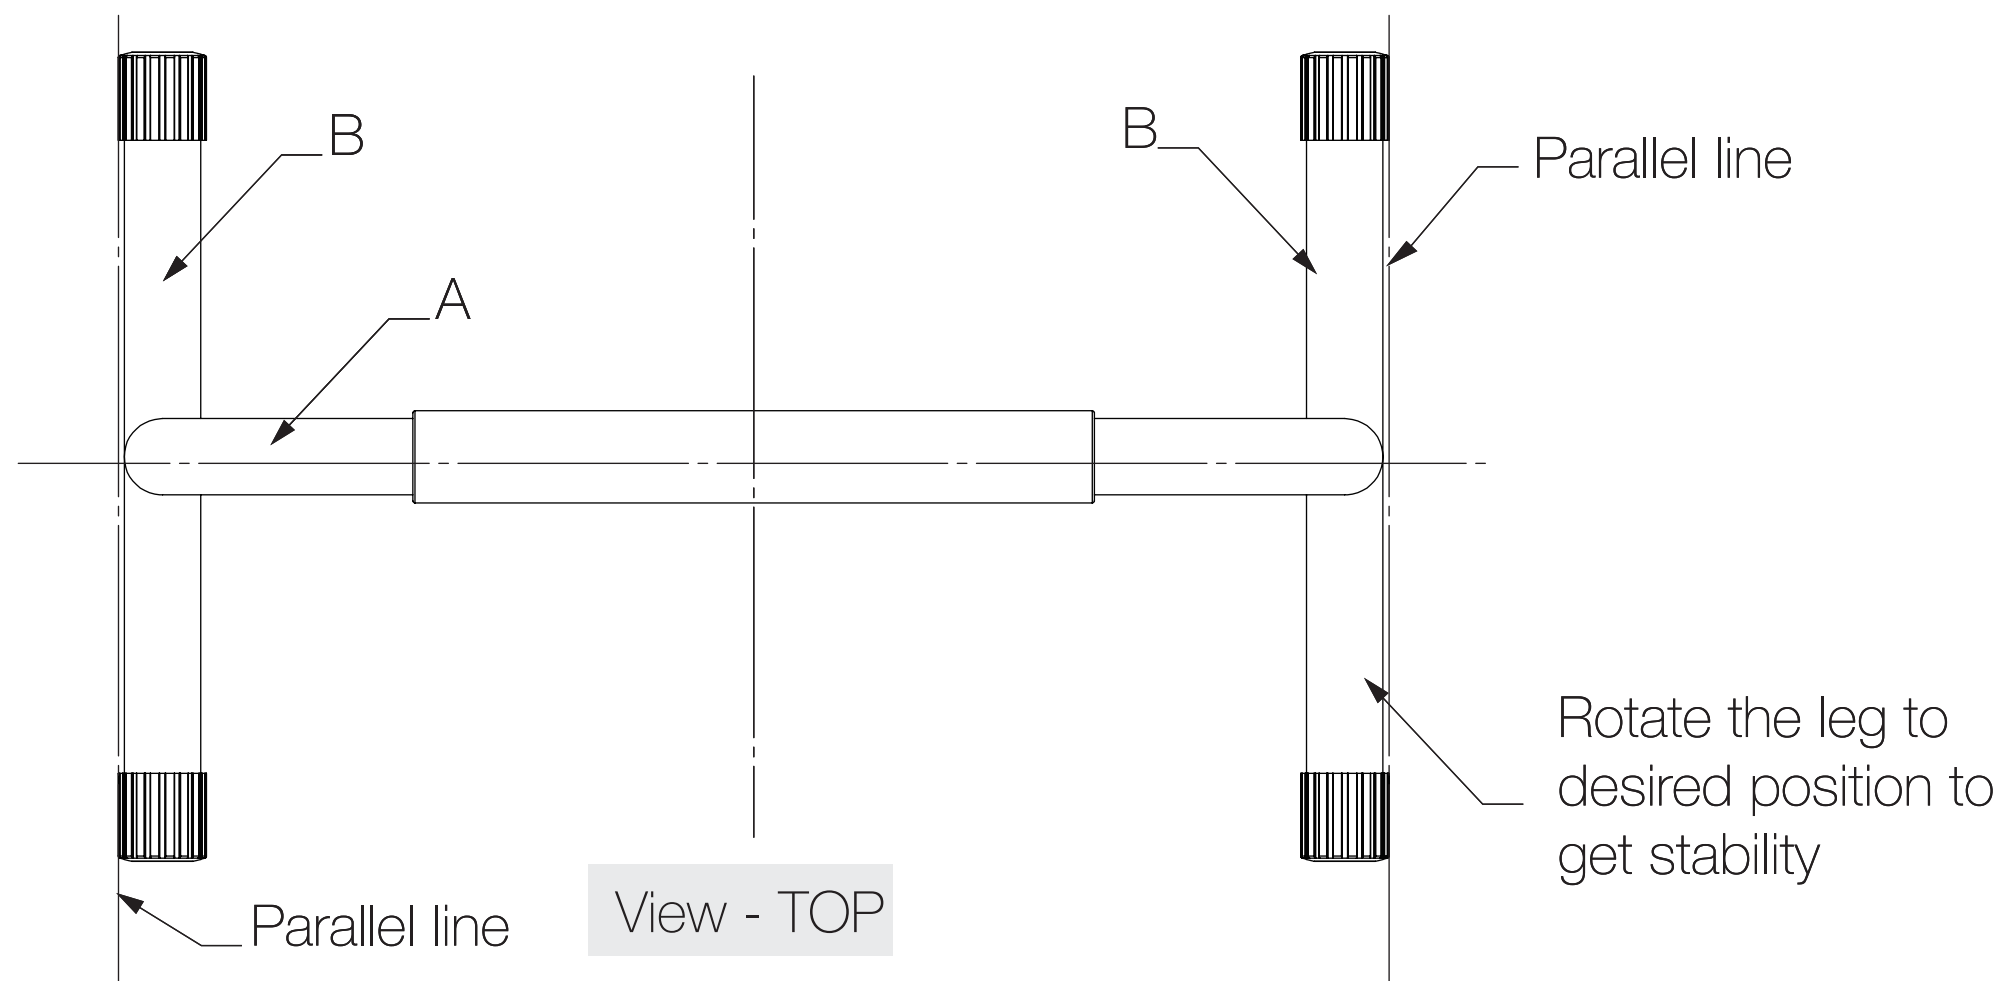

STEP 4.

Follow the same steps to assemble the other PARALLETTE.

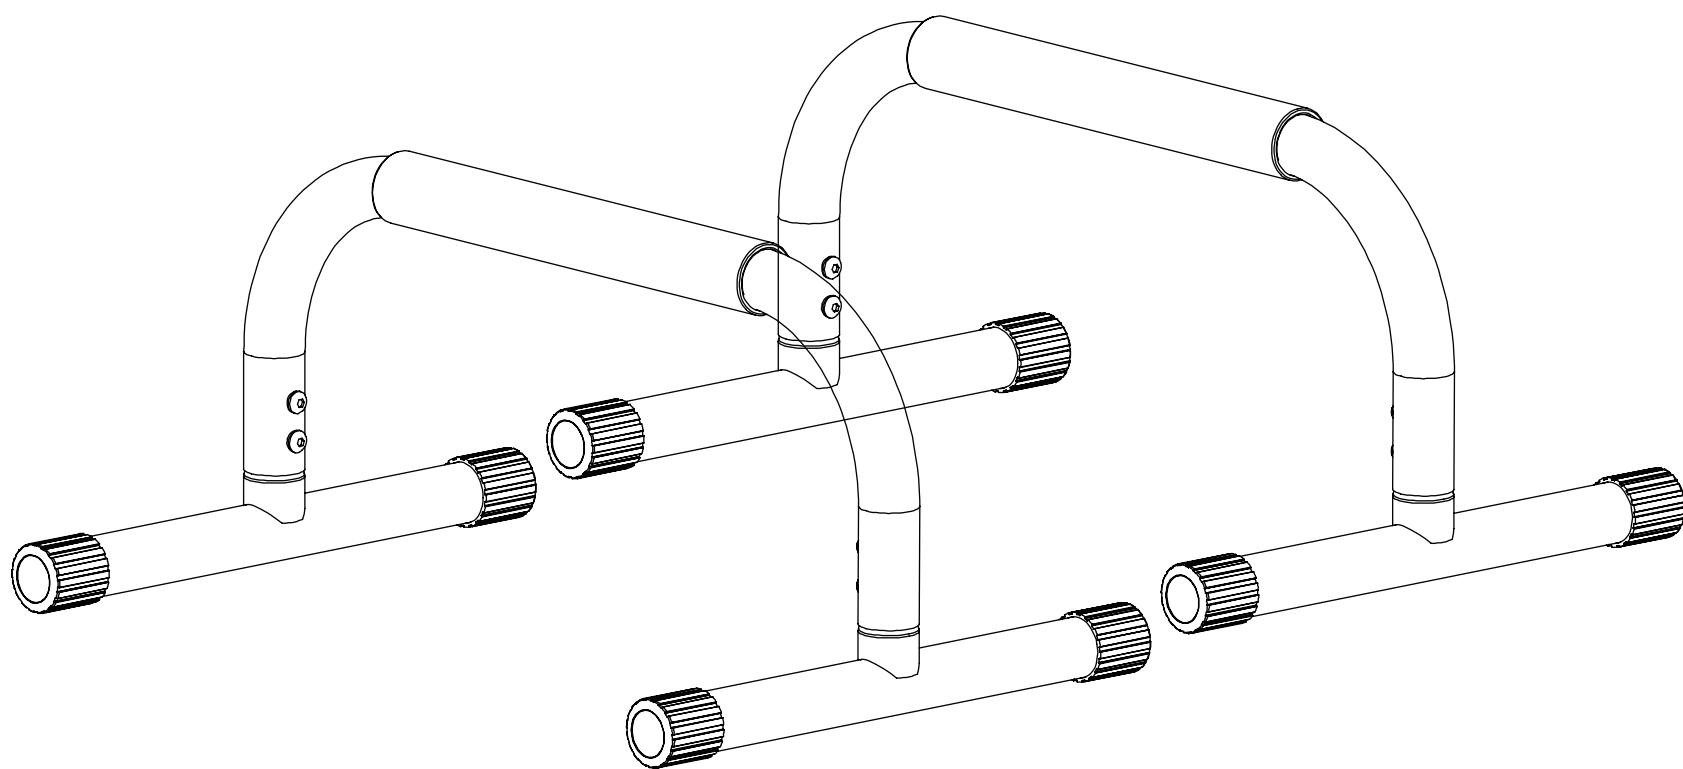

1 set (2pcs)